



C3106 MONTEREY TABLE INSTRUCTIONS



2 3/4" SCREW
(16)



ALLEN WRENCH
(1)

MATERIALS



LEGS
(2)

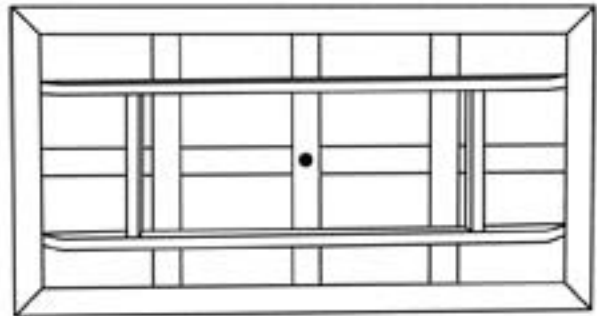


TABLE TOP
(1)

STEP 1:

Insert each set of legs into the four slots on the under side of the table as shown below. Install (4) 2 3/4" screws into each leg using the existing pre-drilled holes.

